


J

Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
Запасные части - 备件

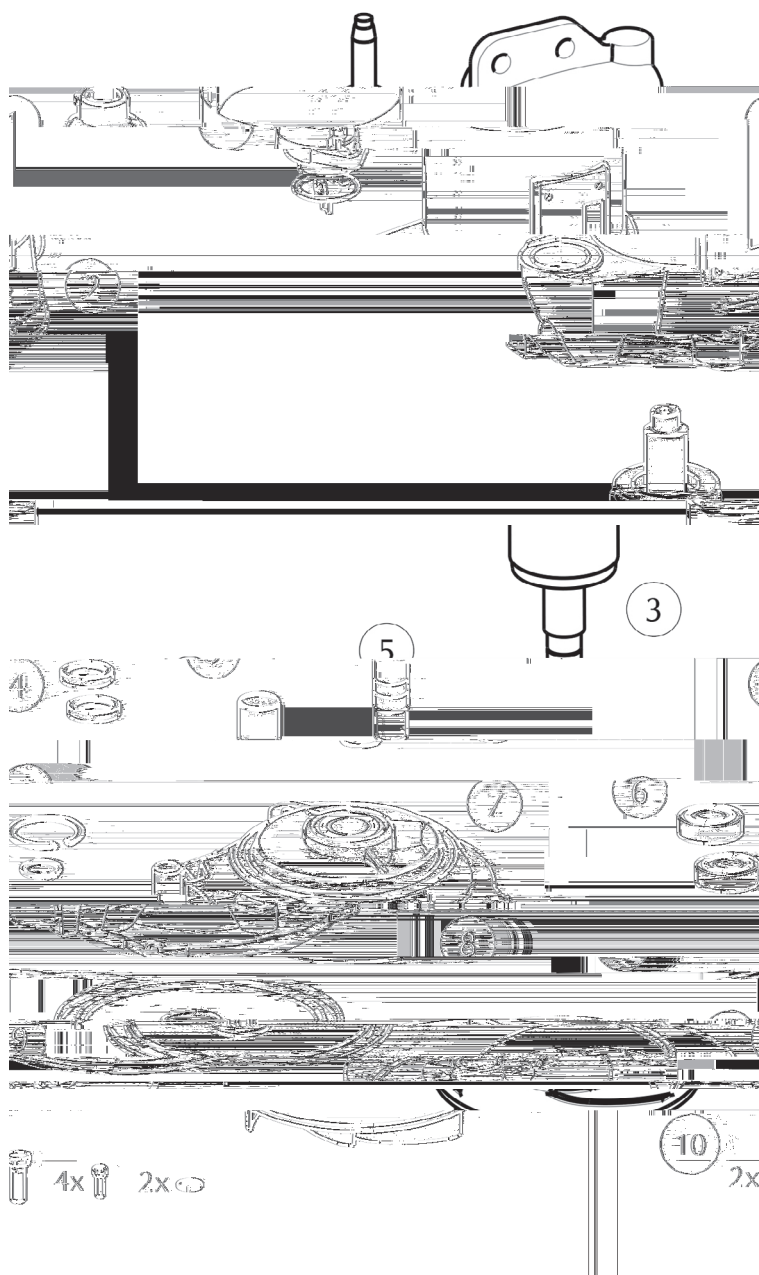

① Steuerung	Control unit	
1010/▲ BWE		JP47285
1010/▲, 101 /▲		JP47286
102 /▲, 102 /2		JP45786
103 /2		JP45787
② D 10/D 100	D 10/D 100	JP48871
③ Klemmflansch	Clamping flange	JP43713
④ Wartungsdeckel	Service lid	JP42798
⑤ Verschiebmuffe	Collar	JP47287
⑥ Behälter	Tank	JP44861
⑦ Steuerungsplatine	Control board	JP47304
⑧ Niveauerfassung	Level control	
▲ m Leitung	▲ m cable	JP43712
1 m Leitung	1 m cable	JP48227
⑨ Pumpenbelüftung	Pump ventilation	JP43710
⑩ Auftriebssicherung	Anti floating	JP43709
⑪ Pumpe	Pump	
1010/▲ BWE, ▲ m		JP46754
1010/▲ BWE, 1 m		JP48684
1010/▲		JP45778
101 /▲		JP45779
102 /▲		JP45780
102 /2		JP48826
103 /2		JP48827
⑫ Elast. Verbindung	Elastic connector	JP43705
⑬ Gehäuseklappe	Housing valve	JP46813
⑭ Flansch	Flange	JP43706
⑮ Doppelklappe	Duplex flap	JP46812
⑯ Basisplatte	Base plate	JP43714
⑰ Dichtband	Sealing tape	JP47966



① Leitung	Cable
10/4, 15/4, 25/4	JP43717
1010/4 BWE, 4 m	JP43721
1010/4 BWE, 15 m	JP48685

② Stator + Gehäuse	Stator + Housing
JP43722	10/4, 15/4, 25/4
JP43722	1010/4 BWE

③ Rotorwelle	Rotor shaft
JP45791	10/4, 15/4, 25/4
JP46801	1010/4 BWE

④ Motorabdichtung	Motor seals
JP46806	
⑤ Laufradbefestigung	Impeller fix
JP46802	10/4, 15/4, 25

	JP46803		1010/4 BWE
Bearing set	JP46774	⑥	Lagersatz
Bearing housing	JP43720	⑦	Lagerschild
Seal set	JP46807	⑧	Dichtungssatz

Laufrad	Impeller
1010/4 BWE	JP46800
JP45793	10/4
JP45794	15/4
JP45795	25/4

Laufschnecke	Impeller housing
--------------	------------------

4x 10 2x

10 2x

UC 25/2 - 35/2

①	Leitung	Cable	JP43717
②	Stator + Gehäus		
